

Foto instructions of replacing an emitter in URCAC200V9010



A heater ready for replacing an emitter



Dismount a bracket of the heater



Remove the bracket




Dismount the side part




Dismount the front cover



Separate the tube, unscrew wires of the emitter

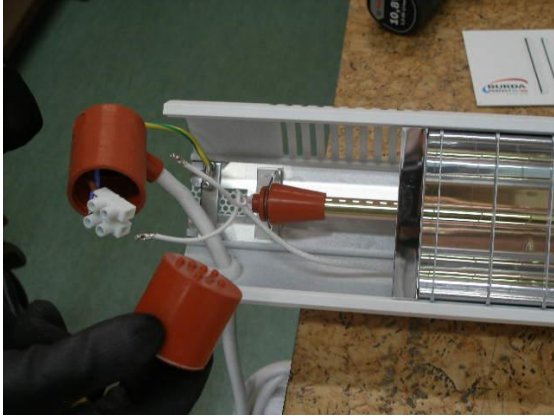

Dismount half of the tube

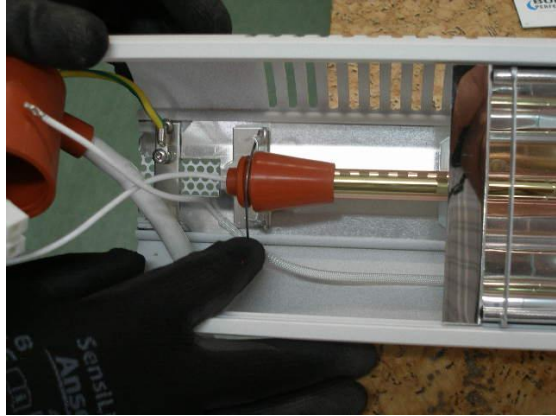

Dismount a spring supporting the emitter



Dismount sealing of the emitter



Dismount a second side part



Dismount the second front cover




Dismount e spring at the second side.



Dismount a wire of the emitter



Gently pull the emitter away

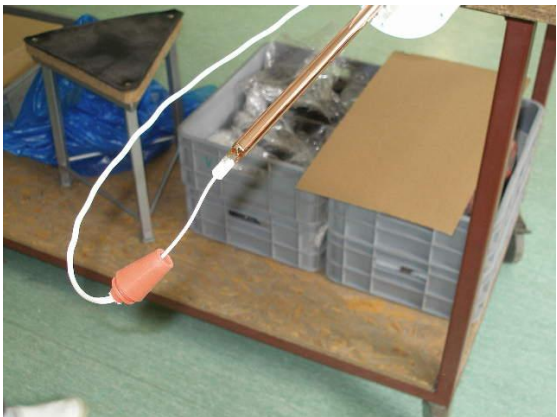

Dismount a sealing of the emitter

After replacing the emitter refit the heater in reverse order

17.09.2015